BOSCH

Jigsaw cordless, Type: GST1270



Order data

Order number	078201 GST1270
GTIN	3165140895200
Item class	03B

Description

Version:

Bosch jigsaw with Bosch SDS System for simple cutting blade change, no tools required. Lightweight and compact **cordless jigsaw** with a straight handle.

- Electronic Motor Protection (EMP) protects the motor against overloading and ensures a long working life.
- Bosch Electronic Cell Protection (ECP): Protects the battery against overheating and deep discharge.
- Switchable LED for bright illumination of the cutting area.
- Gripping position unusually close to the cutting line, so that particularly precise cutting can be performed.

Supplied with:

Including 2×12 V / 3.0 Ah Li-ion battery, charger, $2 \times$ saw blade, chip break guard, extraction set, slide shoe, extraction adapter, L-BOXX 102 and L-BOXX inlay.

Note:

Suitable spare batteries and chargers can be found under No. 073808 – 073840.

Packaging: Modular case (L-Boxx)

suitable battery - supplier / battery type / voltage: Bosch 12 V

Manufacturer's designation: GST 12V-70

Number of rechargeable batteries contained: 2

Type of rechargeable battery: Lithium-ion

Battery capacity: 3 Ah Battery voltage: 12 V Rate of strokes: 1500 - 2800 rpm

Technical description

12 V
Bosch 12 V
1.5 kg
70 mm
3 mm
LED
1500 - 2800 rpm
3 Ah
GST 12V-70
yes, SDS system
yes
5.5 m/s ²
3-way
Compact straight handle
Lithium-ion
2
Rechargeable battery-powered
Modular case (L-Boxx)
Saw

Accessories

Jigsaw blades set Designation T118AF

588400 T118AF

Jigsaw blades set Designation T118AHM	588400 T118AHM
Jigsaw blades set Designation T318A	588400 T318A
Jigsaw blades set Designation T318B	588400 T318B
Li-ion battery Battery type, battery voltage B12 V	073855 B12
Jigsaw blades set Designation T118B	588400 T118B
Jigsaw blades set Designation T127D	588400 T127D
Battery charger Type AL1130CV	073866 AL1130CV
Jigsaw blades set Designation T118A	588400 T118A